




1 Comp. Loc. Grounds

- ◆ ⇒ ["1.1 Overview", page 1](#)
- ◆ ⇒ ["1.2 Vehicle Front Grounds", page 2](#)
- ◆ ⇒ ["1.3 Vehicle Cabin Grounds", page 8](#)
- ◆ ⇒ ["1.4 Vehicle Rear Grounds", page 19](#)

1.1 Overview

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- 685 - Ground Connection 1 (on right front long member) ⇒ [Item 685 \(page 3\)](#)
- 13 - Ground connection in engine compartment, right ⇒ [Item 13 \(page 4\)](#)
- 43 - Ground Connection (on right lower A-pillar) ⇒ [Item 43 \(page 18\)](#)
- 45 - Ground Connection (behind instrument panel, center) ⇒ [Item 45 \(page 17\)](#)
- 687 - Ground Connection 1 (on center tunnel) ⇒ [Item 687 \(page 10\)](#)
- 35 - Ground Connection (below front passenger's seat) ⇒ [Item 35 \(page 11\)](#)
- 688 - Ground Connection 2 (on center tunnel) ⇒ [Item 688 \(page 12\)](#)
- 654 - Ground Connection (on right D-pillar) ⇒ [Item 654 \(page 24\)](#)
- 51 - Ground Connection (in luggage compartment, right) ⇒ [Item 51 \(page 20\)](#)
- 624 - Ground Connection (near starter battery) ⇒ [Item 624 \(page 5\)](#)
- 744 - Ground Connection in spare tire well ⇒ [Item 744 \(page 21\)](#)
- 50 - Ground Connection (in luggage compartment, left) ⇒ [Item 50 \(page 22\)](#)
- 653 - Ground Connection (on left D-pillar) ⇒ [Item 653 \(page 23\)](#)
- 34 - Ground Connection (below driver's seat) ⇒ [Item 34 \(page 9\)](#)
- 14 - Ground connection on transmission ⇒ [Item 14 \(page 19\)](#)
- 704 - Ground Connection 2 (below driver's seat) ⇒ [Item 704 \(page 14\)](#)
- 44 - Ground Connection (on left lower A-pillar) ⇒ [Item 44 \(page 13\)](#)
- 671 - Ground Connection 1 on left front long member ⇒ [Item 671 \(page 6\)](#)
- 645 - Ground connection 1 on bulkhead ⇒ [Item 645 \(page 7\)](#)
- 55 - Ground Connection beside ABS Control Module ⇒ [Item 55 \(page 8\)](#)
- 664 - Ground Connection (behind instrument panel, left) ⇒ [Item 664 \(page 16\)](#)
- 665 - Ground Connection (behind instrument panel, right) ⇒ [Item 665 \(page 15\)](#)

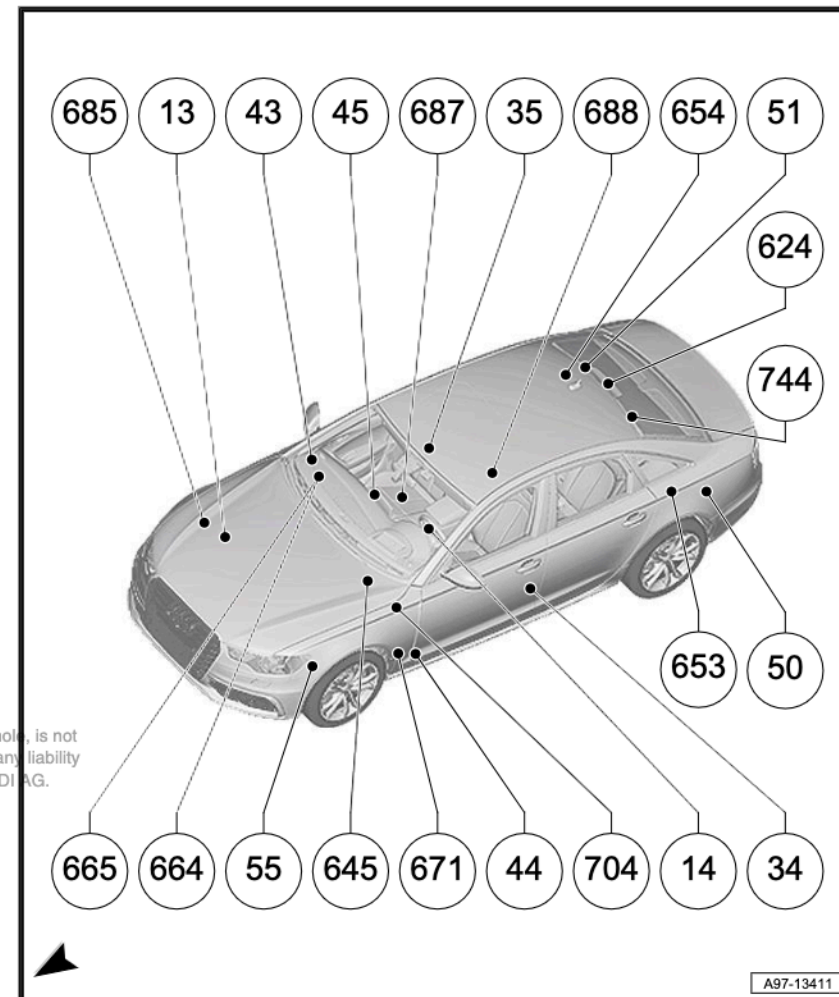

1.2 Vehicle Front Grounds

- ◆ ⇒ ["1.2.1 Ground RF part I", page 3](#)
- ◆ ⇒ ["1.2.2 Ground RF part II", page 4](#)
- ◆ ⇒ ["1.2.3 Ground near battery ", page 5](#)
- ◆ ⇒ ["1.2.4 Ground LF part I", page 6](#)


◆ ⇒ ["1.2.5 Ground bulkhead", page 7](#)

◆ ⇒ ["1.2.6 Ground LF part II", page 8](#)

1.2.1 Ground RF part I

685 - Ground Connection 1 (on right front long member) -Arrow-

- ☐ On outside right front long member.
- ☐ 20 Nm

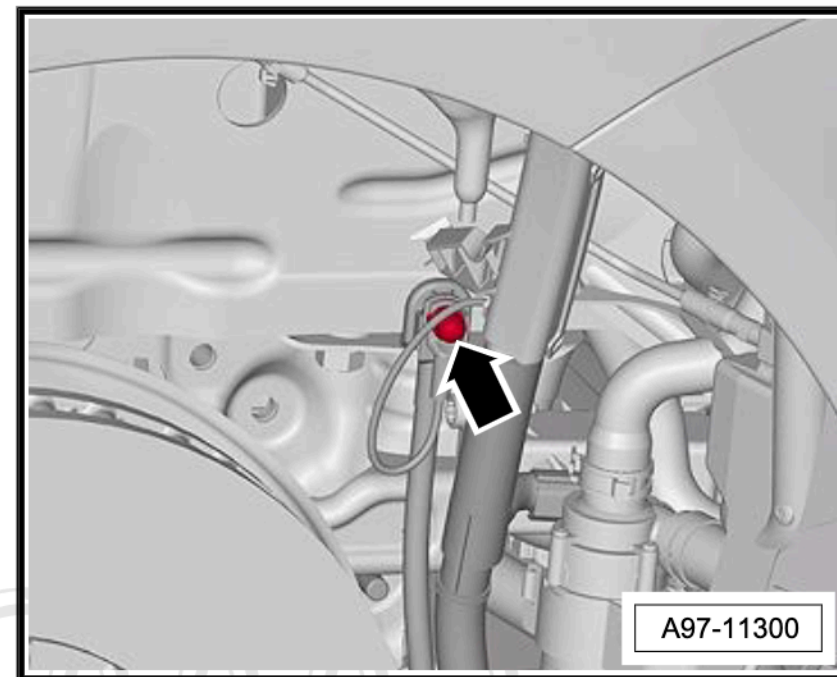


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.2.2 Ground RF part II

13 - Ground Connection (in engine compartment, right) -Arrow-

- ☐ In engine compartment, right, near alternator.
- ☐ 9 Nm

Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. No liability with respect to the correctness of information.

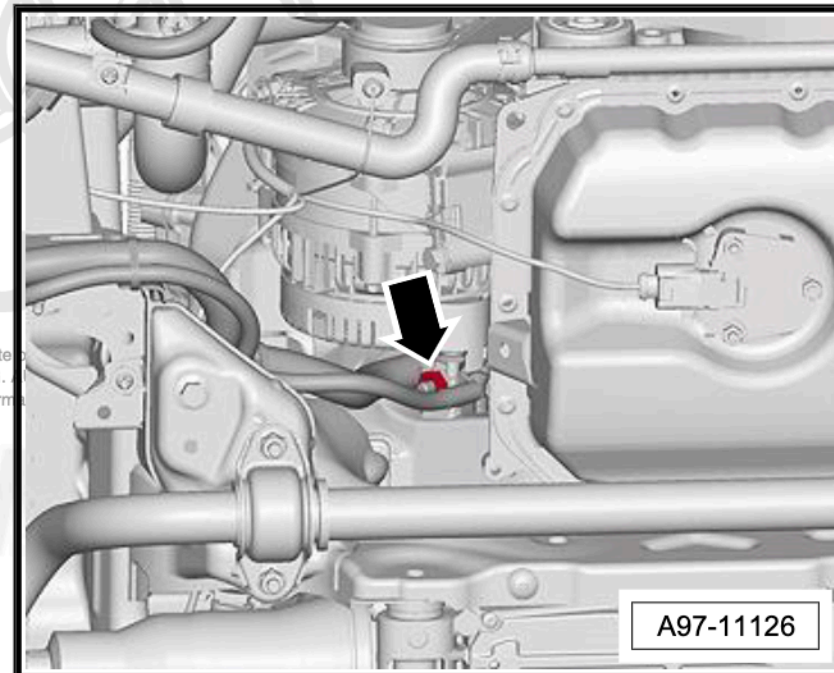

A97-11126

1.2.3 Ground near battery


624 - Ground Connection (near starter battery) -Arrow-

- ☐ In front right spare tire well
- ☐ 9 Nm

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

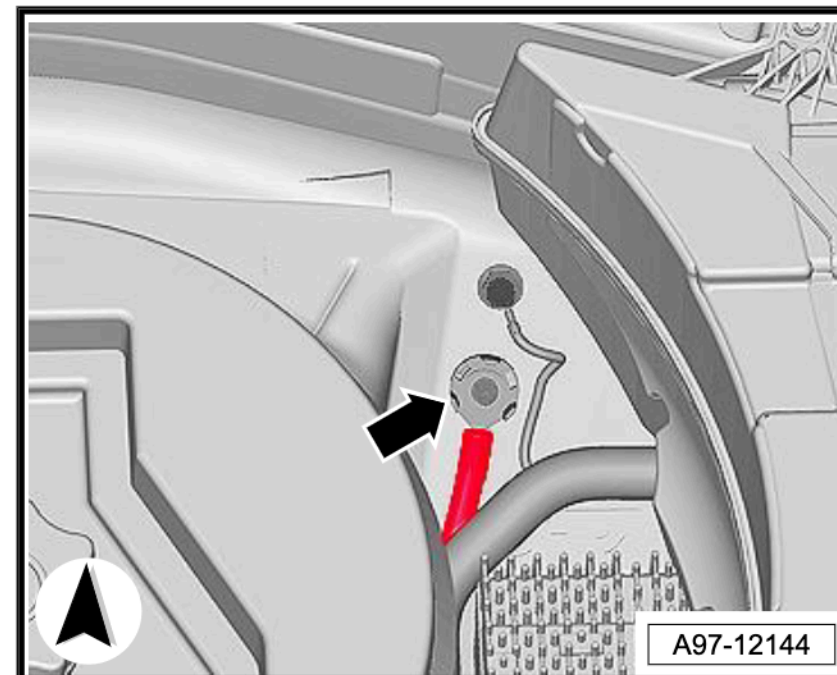

1.2.4 Ground LF part I

671 - Ground Connection 1 on left front long member -Arrow-

- On left lower front long member.
- 9 Nm

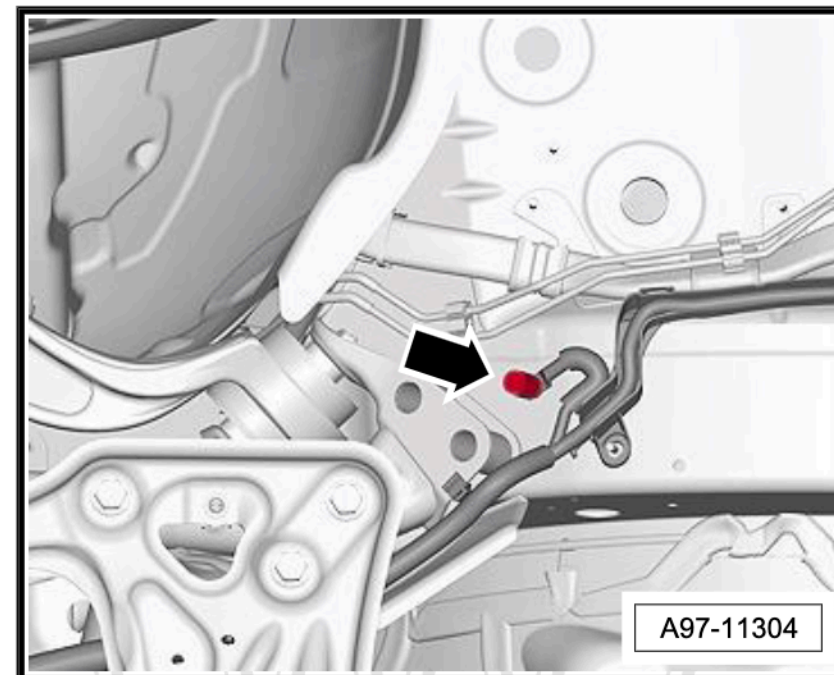

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




1.2.5 Ground bulkhead

645 - Ground connection 1 on bulkhead -Arrow-

- ☐ On bulkhead near Engine control module J623.
- ☐ 9 Nm



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

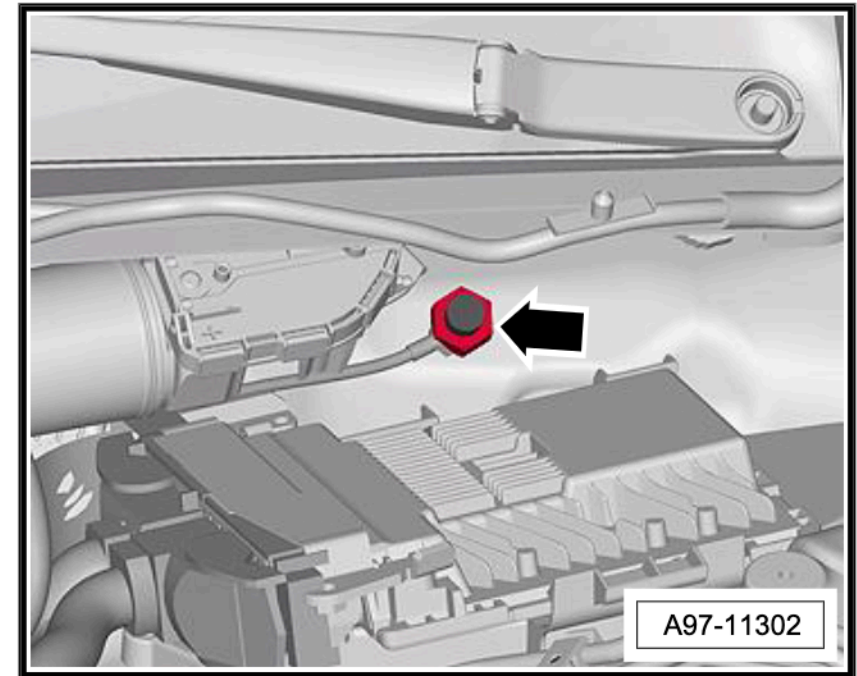


1.2.6 Ground LF part II

55 - Ground Connection beside ABS Control Module -Arrow-

- ☐ On left long member, near ABS Control Module J104.
- ☐ 9 Nm

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

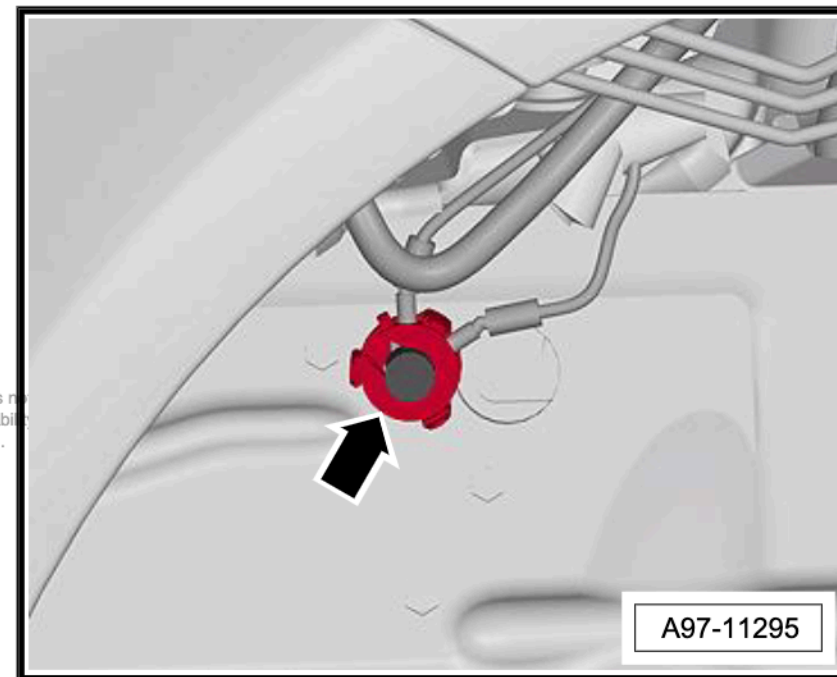

A97-11295

1.3 Vehicle Cabin Grounds

- ◆ ⇒ ["1.3.1 Ground left, part I", page 9](#)
- ◆ ⇒ ["1.3.2 Ground center, part I", page 10](#)
- ◆ ⇒ ["1.3.3 Ground right", page 11](#)
- ◆ ⇒ ["1.3.4 Ground center, part II", page 12](#)
- ◆ ⇒ ["1.3.5 Ground LF, part I", page 13](#)
- ◆ ⇒ ["1.3.6 Ground left, part II", page 14](#)
- ◆ ⇒ ["1.3.7 Ground RF, part I", page 15](#)
- ◆ ⇒ ["1.3.8 Ground LF, part II", page 16](#)
- ◆ ⇒ ["1.3.9 Ground center, part III", page 17](#)

- ◆ ⇒ ["1.3.10 Ground RF, part II", page 18](#)
- ◆ ⇒ ["1.3.11 Transmission ground", page 19](#)


1.3.1 Ground left, part I

34 - Ground Connection (below driver's seat) -Arrow-

- ☐ Below driver's seat, near driver's seat coupling.
- ☐ 9 Nm



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

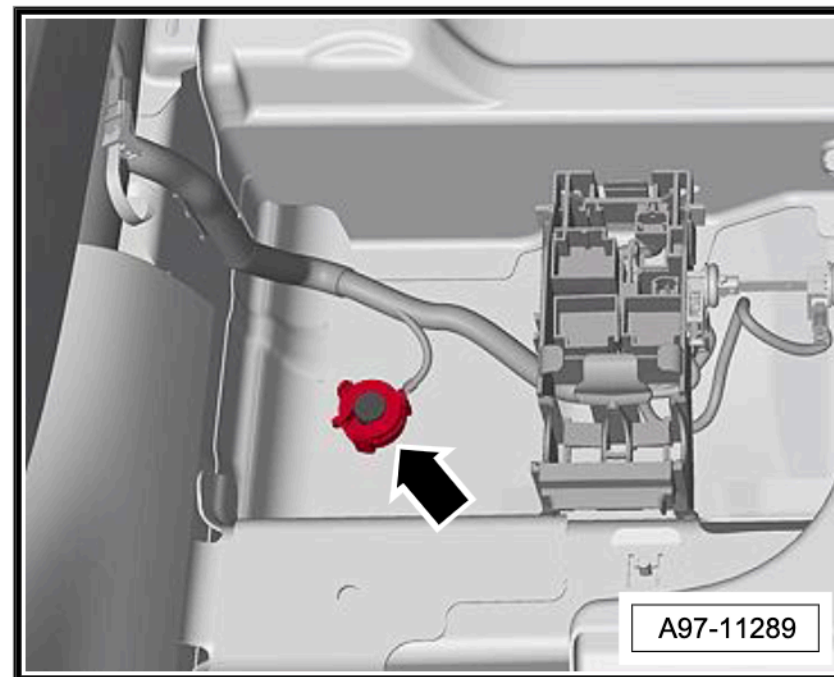


A97-11289

1.3.2 Ground center, part I

687 - Ground Connection 1 (on center tunnel) -Arrow-

- ☐ On front right center tunnel.
- ☐ 9 Nm

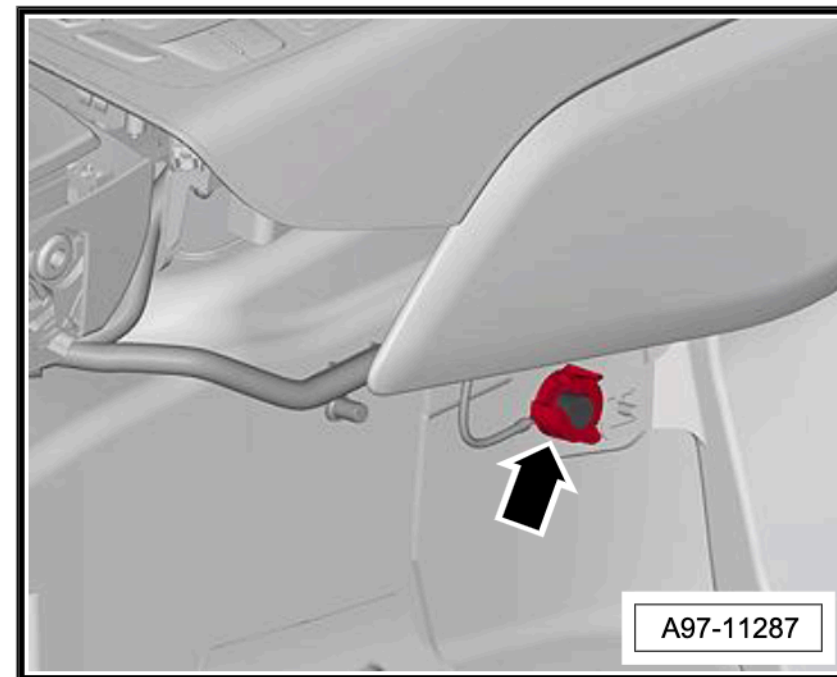


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.3.3 Ground right

35 - Ground Connection (below front passenger's seat) -Arrow-

- ☐ Below passenger's seat, near front passenger's seat coupling.
- ☐ 9 Nm

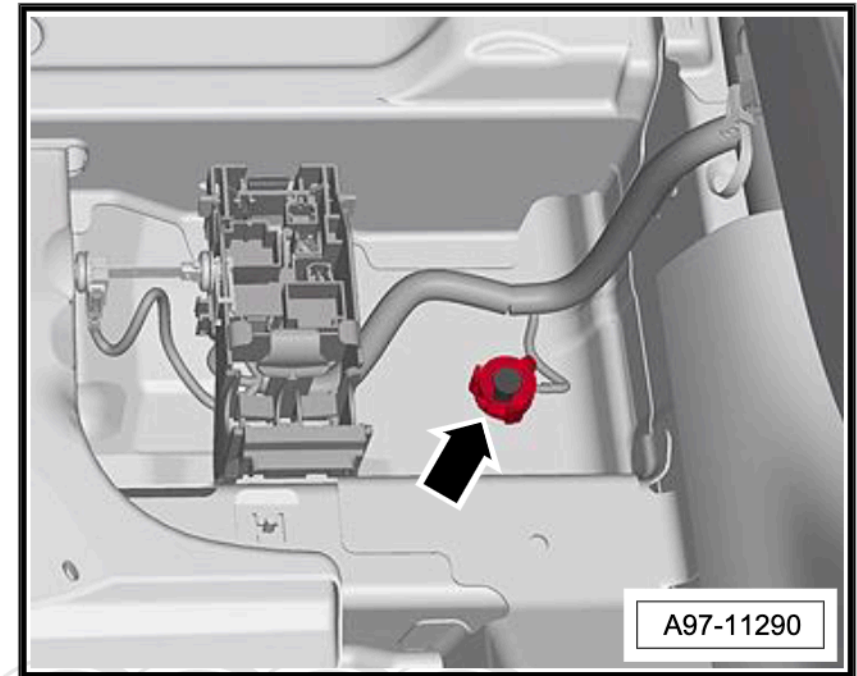


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.3.4 Ground center, part II

688 - Ground Connection 2 (on center tunnel) -Arrow-

- ☐ Below rear seat near Data Bus On Board Diagnostic Interface J533.
- ☐ 9 Nm

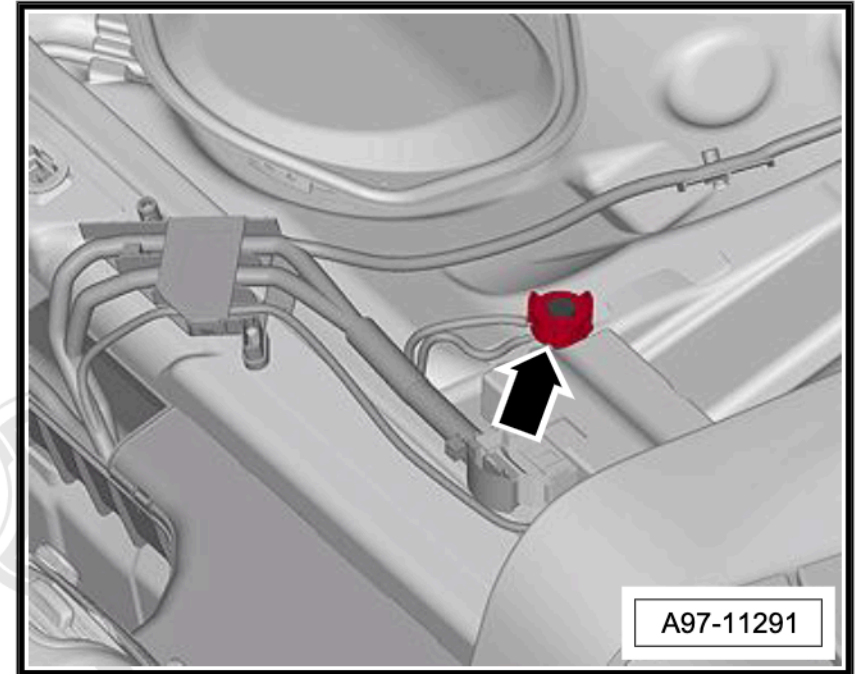


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.3.5 Ground LF, part I

44 - Ground Connection (on left lower A-pillar) -Arrow-

- ☐ On left lower A-pillar.
- ☐ 9 Nm


Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

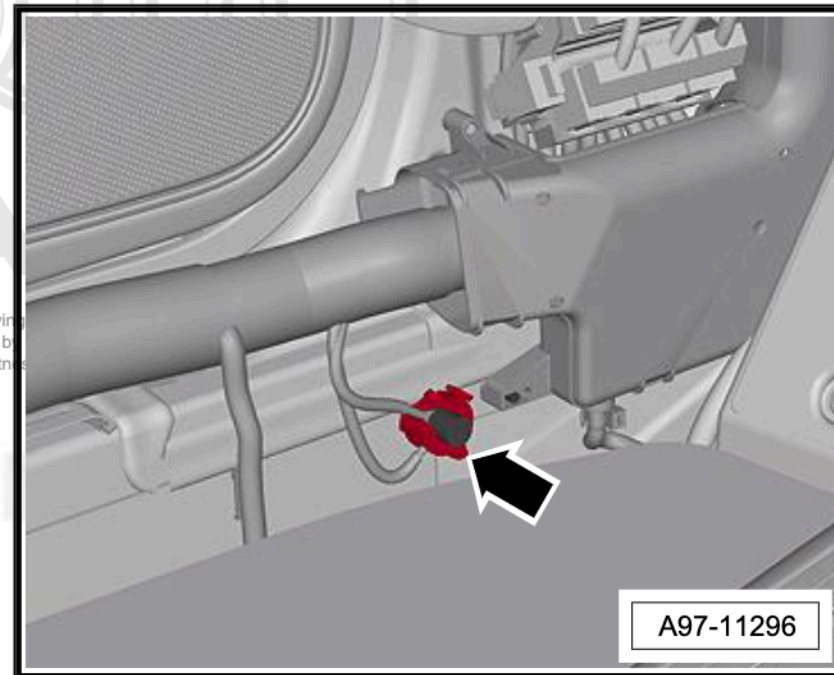

1.3.6 Ground left, part II

704 - Ground Connection 2 (below driver's seat) -Arrow-

- ☐ Below front driver's seat.
- ☐ 9 Nm

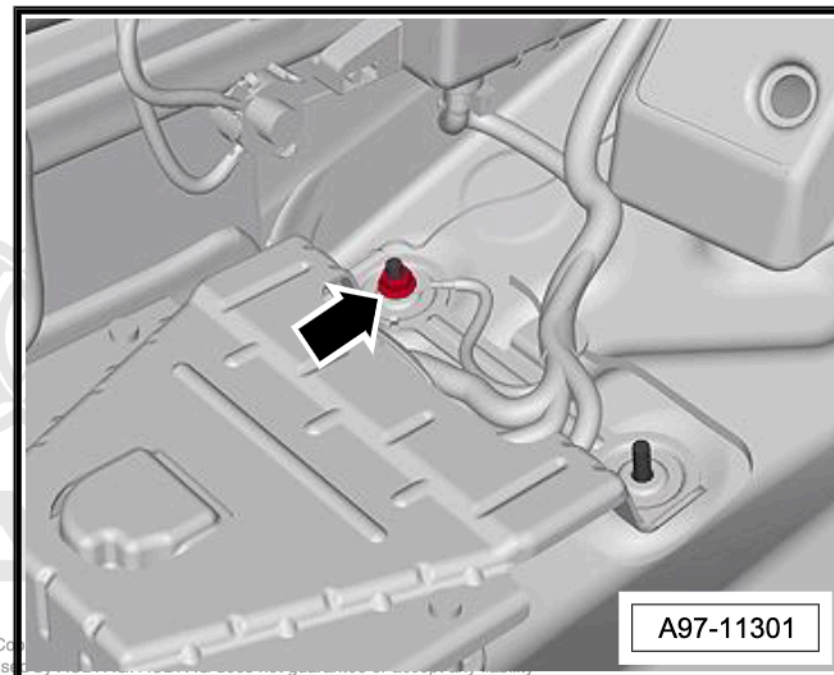


Protected by copyright. Copying or reproduction in any form is prohibited without permission. All rights reserved. Copyright by AUDI AG.

1.3.7 Ground RF, part I

665 - Ground Connection (behind instrument panel, right) -Arrow-

- ☐ Behind glove compartment, near front passenger's airbag.
- ☐ 9 Nm

Protected
permitted
with res

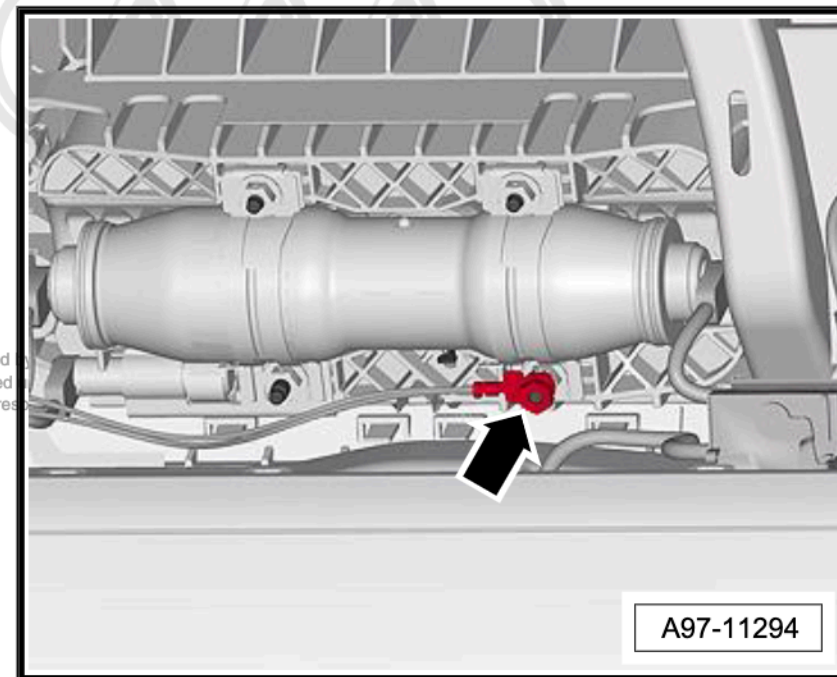


A97-11294

1.3.8 Ground LF, part II

664 - Ground Connection (behind instrument panel, left) -Arrow-

- ☐ Behind glove compartment, near front passenger's airbag.
- ☐ 9 Nm

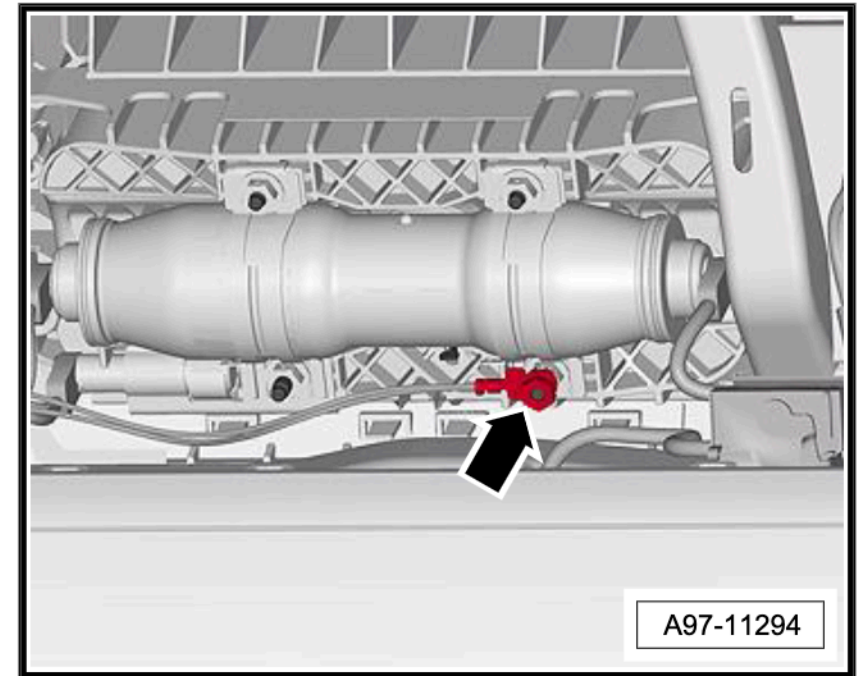


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.3.9 Ground center, part III

45 - Ground Connection (behind instrument panel, center) -Arrow-

- ☐ Behind lower instrument panel, center.
- ☐ 9 Nm


Protected by copyright. Copying
permitted unless authorised
with respect to the correct

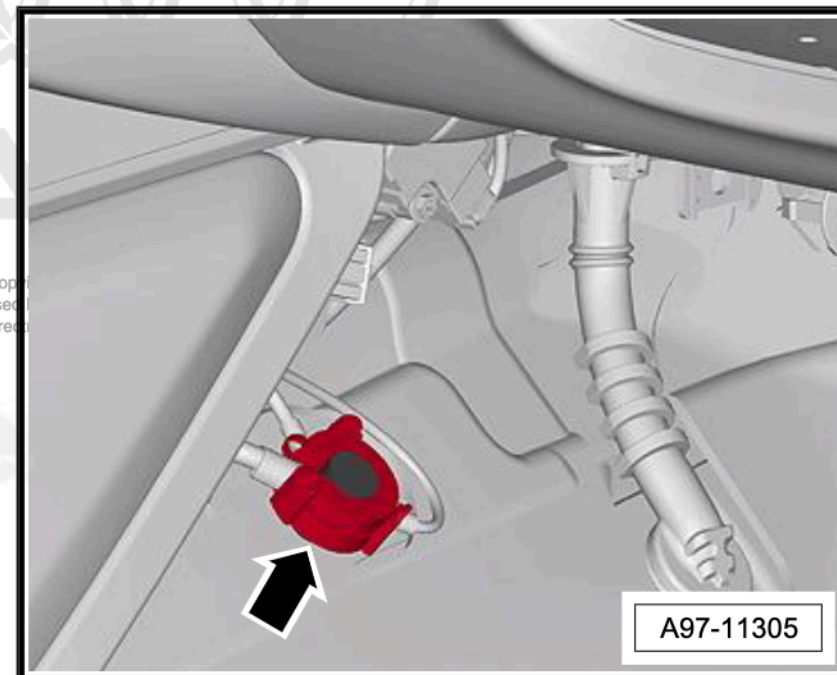

1.3.10 Ground RF, part II

43 - Ground Connection (on right lower A-pillar) -Arrow-

- ☐ On right lower A-pillar.
- ☐ 9 Nm

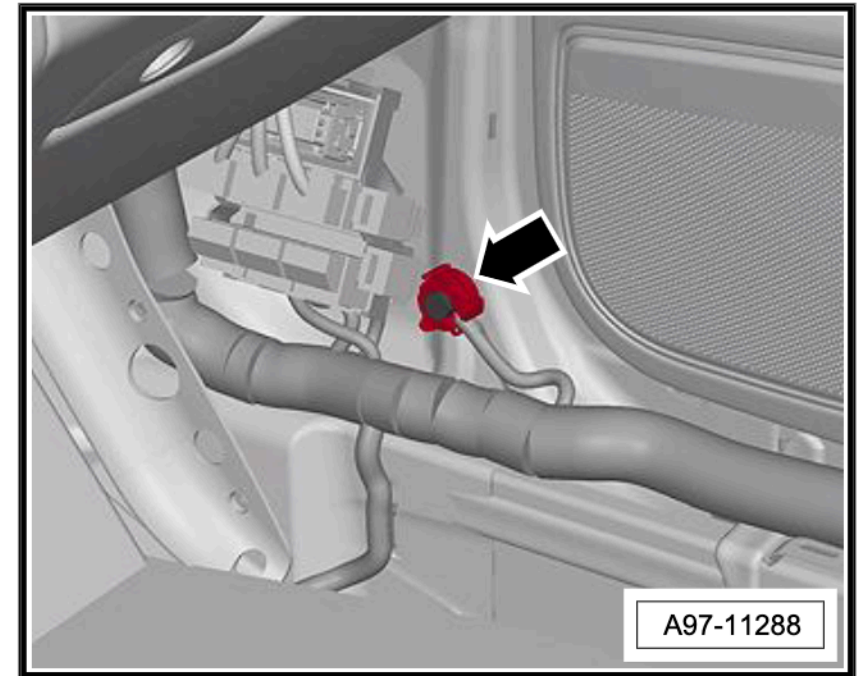

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

1.3.11 Transmission ground

14 - Ground connection on transmission

- ☐ On left side of transmission.
- ☐ 9 Nm

Protected by copyright. Copying for private or commercial purposes, in part or in full, is prohibited without the written permission of Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Audi AG.

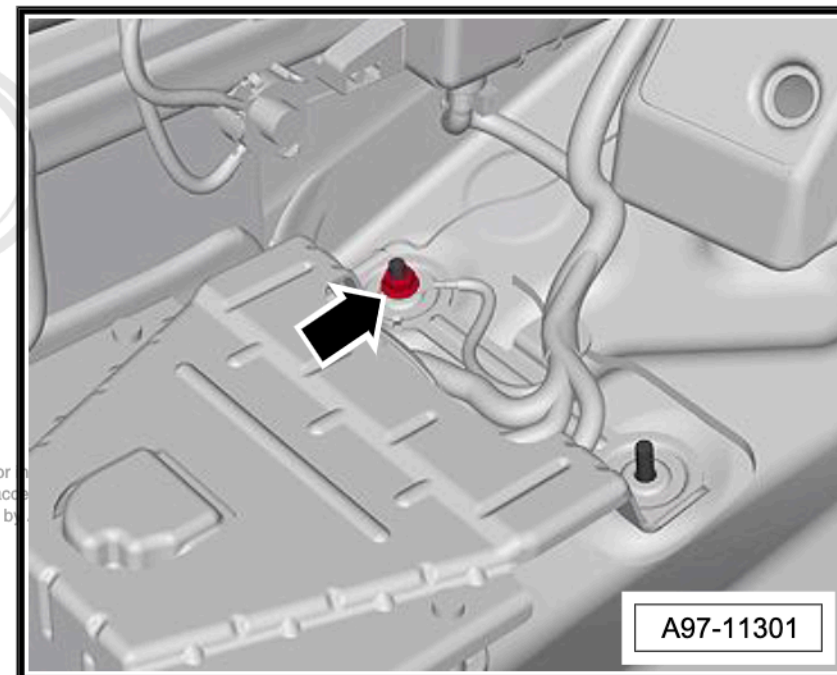

1.4 Vehicle Rear Grounds

- ◆ ⇒ ["1.4.1 Ground RR", page 20](#)
- ◆ ⇒ ["1.4.2 Ground spare tire well ", page 21](#)
- ◆ ⇒ ["1.4.3 Ground LR", page 22](#)
- ◆ ⇒ ["1.4.4 Ground left D-pillar ", page 23](#)
- ◆ ⇒ ["1.4.5 Ground right D-pillar", page 24](#)

1.4.1 Ground RR

51 - Ground Connection (in luggage compartment, right) -Arrow-


- ☐ In right luggage compartment, near relay and fuse carrier.
- ☐ 9 Nm



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

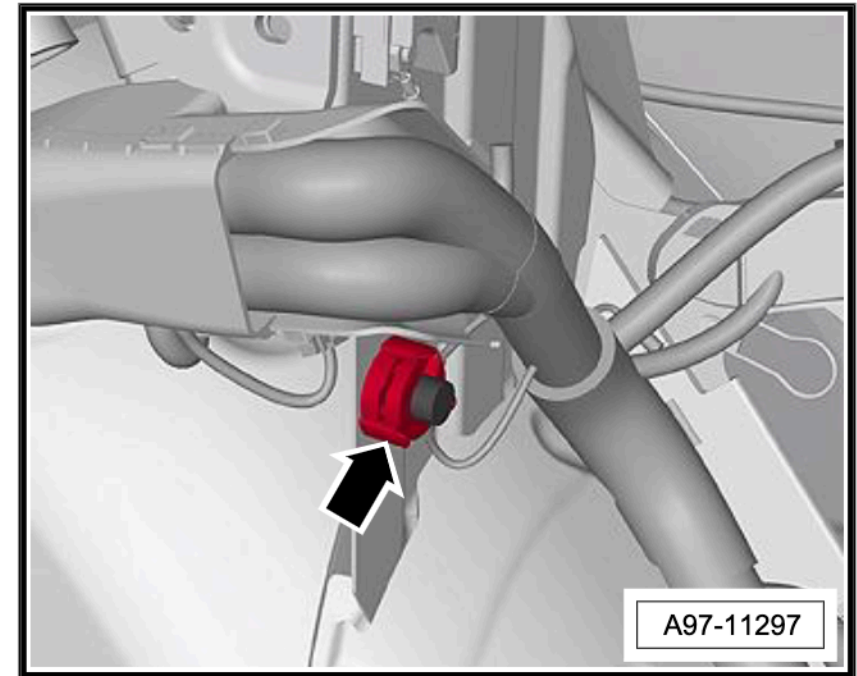


A97-11297

1.4.2 Ground spare tire well

744 - Ground Connection in spare tire well -Arrow-
In right spare tire well.

□ 9 Nm

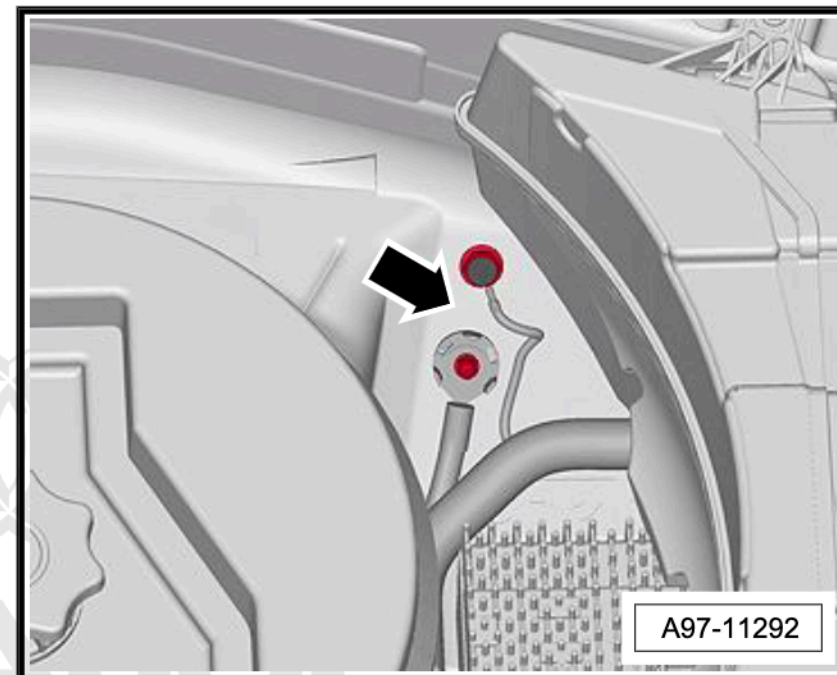


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.4.3 Ground LR

50 - Ground Connection (in luggage compartment, left) -Arrow-

- ☐ In luggage compartment, left, near Infotainment.
- ☐ 9 Nm

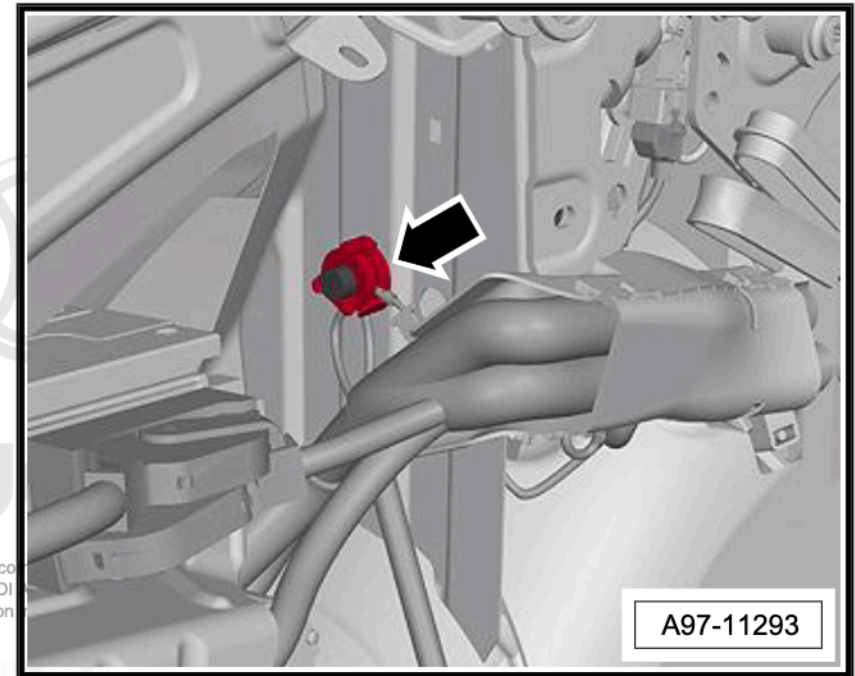


Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG is not responsible with respect to the correctness of information.

1.4.4 Ground left D-pillar

653 - Ground Connection (on left D-pillar) -Arrow-

- ☐ Behind the left rear backrest element.
- ☐ 9 Nm


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

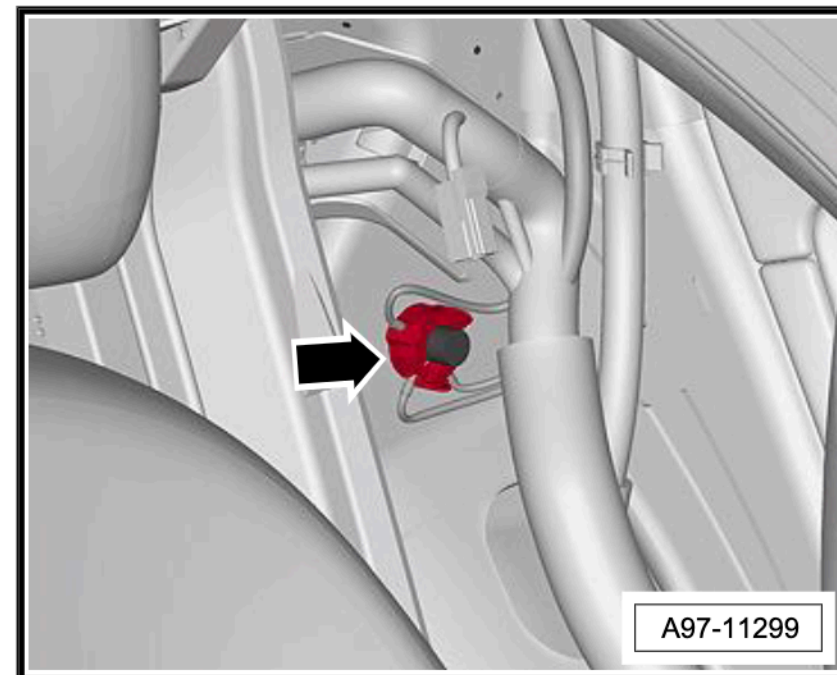

1.4.5 Ground right D-pillar

654 - Ground Connection (on right D-pillar) -Arrow-

- ☐ Behind the right rear backrest element.
- ☐ 9 Nm

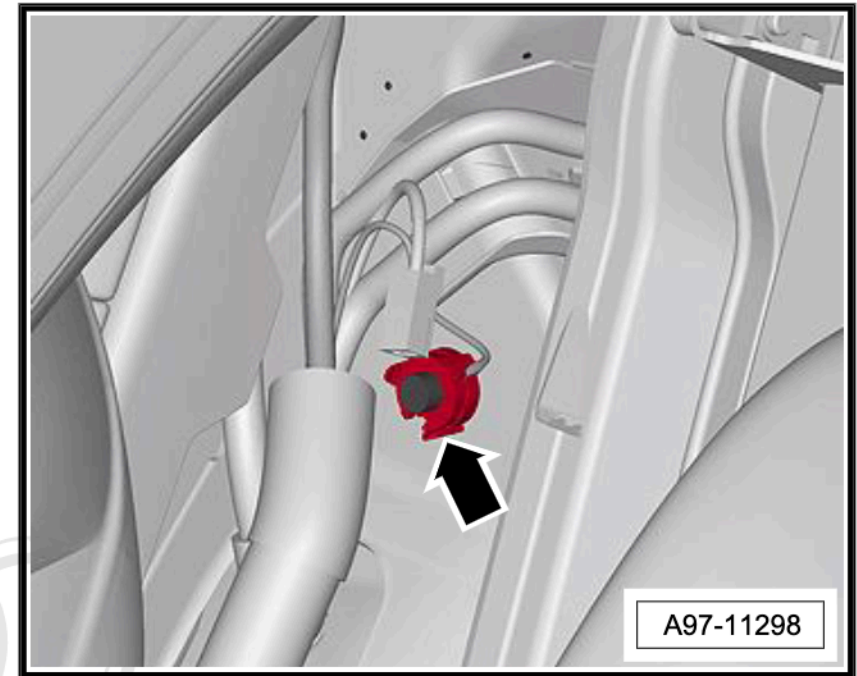

10.26.2016

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.